






## **Resetting the TS Series Thermostat**

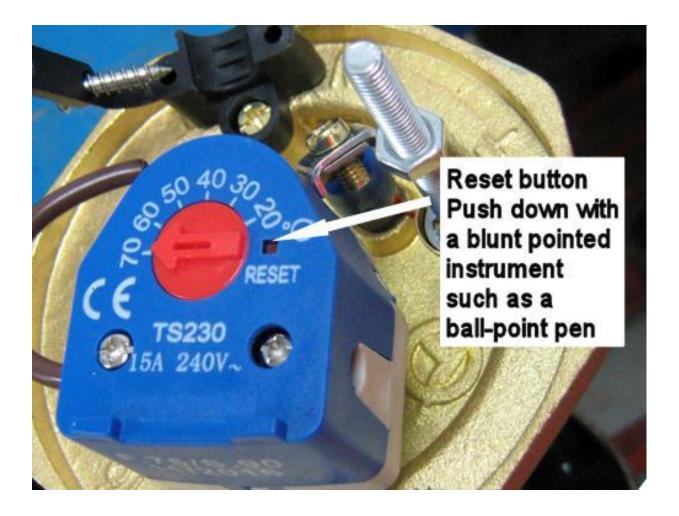

If the thermostat has tripped then the button will be flush with the top of the plastic housing. We recommend the use of a ball point pen or similar tool to push it down (small screwdrivers are usually too big to fit through the hole) and when it resets it will go down with a noticeable click. Once it is reset the button will be about 1.5mm below the surface of the housing.

If the thermostat is tripping persistently this is likely to be caused by an issue with the installation. Please call our technical help line on 0121 686 8733 for further advice.







TELEPHONE:





**EMAIL:** 

